

Getting Started: How to unlock the drive

datashur[®]
personal



EASY TO USE

YOUR datAshur Personal[®] SHIPS WITH DEFAULT PIN CODE 1-1-2-2-3-3-4-4

1. *Press KEY Button	& will blink together
2. *Within 10 seconds enter User PIN (factory default PIN 1,1,2,2,3,3,4,4) and press KEY Button	& will illuminate together for approximately 4 seconds and then change to blinking
3. Connect datAshur Personal into USB port within 30 seconds	will illuminate and remain solid will illuminate and flicker
4. datAshur Personal can now be accessed as any other USB storage device	Your computer assigns a new drive letter (e.g. F: or G:)
5. To lock datAshur Personal save all data and unplug the drive	All indicators will turn off Drive is now locked

*before connecting



iStorage datAshur Personal is developed and manufactured by iStorage Ltd. and is based on DataLock[®] technology licensed from ClevX, LLC



Please note:

The datAshur Personal drive may need to be charged before use for 30-60 minutes by inserting into a powered USB port.



CAUTION

**FOR SECURITY, CHANGE
FACTORY DEFAULT PIN**
SEE OTHER SIDE FOR INSTRUCTIONS

Quick Start Guide



How to change User PIN:

iStorage[®]
SECURING THE MAINSTREAM



CAUTION

FOR SECURITY, CHANGE FACTORY DEFAULT PIN

PIN must not be sequential or all the same number e.g. 1-2-3-4-5-6-7 or 3-3-3-3-3-3-3

1. Press KEY Button	& will blink together
2. Enter User PIN (factory default PIN 1,1,2,2,3,3,4,4) and press KEY Button	& will illuminate together for approximately 4 seconds and then change to blinking
3. Press and hold KEY Button for 3 seconds	& will illuminate together
4. While & are illuminated enter New User PIN (must be 7-15 digits) and press KEY Button	& will blink in unison
5. Re-enter New User PIN and press the KEY Button	& will illuminate and then change to blinking
Insert datAshur Personal into USB port	NB & blinks if 1 st and 2 nd entries match & blink alternately if PIN entry error

datashur[®]
personal

Compatibility

