











## Getting Started: How to unlock the drive

datashur<sup>®</sup>  
PRO

### EASY TO USE

YOUR datAshur PRO SHIPS WITH DEFAULT PIN CODE 1-1-2-2-3-3-4-4

1. *Press <b>KEY Button</b> 	All LEDs    will flash together once and then blink 
2. *Within 10 seconds enter <b>User PIN</b> (factory default <b>PIN 1-1-2-2-3-3-4-4</b> ) and press <b>KEY Button</b> 	 solid for approximately 2 seconds and then change to solid 
3. Connect the datAshur PRO into USB port within 30 seconds	 remains solid  will flicker and turn to solid
4. datAshur PRO can now be accessed as any other USB storage device	Your computer assigns a new drive letter (e.g. F: or G:)
5. To lock the datAshur PRO, save all data and unplug the drive	All indicators will turn off Drive is now locked

\*before connecting



iStorage datAshur PRO is developed and manufactured by iStorage Ltd. and is based on DataLock® technology licensed from ClevX, LLC



## Quick Start Guide



### Please note:

The datAshur PRO drive may need to be charged before use for 30-60 minutes by inserting into a powered USB port.

**FOR SECURITY, CHANGE  
FACTORY DEFAULT PIN**  
SEE OTHER SIDE FOR INSTRUCTIONS



  
SECURING THE MAINSTREAM  
[www.istorage-uk.com](http://www.istorage-uk.com)

85.5mm

54mm

Quick Start Guide shown at actual size

Printing instructions:  
This is a tri-fold brochure to be printed on both sides with a finished folded dimensions of 85.5mm x 54.00mm

WHEN FOLDED THE QSG WILL LOOK LIKE THIS WITH A FINISHED FOLDED DIMENSIONS OF 85.5 mm x 54 mm

## How to change User PIN:




















iStorage<sup>®</sup>  
SECURING THE MAINSTREAM



### CAUTION

### FOR SECURITY, CHANGE FACTORY DEFAULT PIN

PIN must not be sequential or all the same number e.g. 1-2-3-4-5-6-7 or 3-3-3-3-3-3-3

1. Press <b>KEY Button</b> 	All LEDs    will flash together and then blink 
2. Enter <b>User PIN</b> (factory default <b>PIN 1-1-2-2-3-3-4-4</b> ) and press <b>KEY Button</b> 	 solid for approximately 2 seconds and then change to solid 
3. Press <b>KEY Button twice</b>  	 will blink
4. Within 10 seconds enter <b>New User PIN</b> (must be 7 -15 digits) and press <b>KEY Button twice</b>  	 will blink
5. Re-enter <b>New User PIN</b> and press the <b>KEY Button twice</b>   Insert the datAshur PRO into USB port	 will illuminate and then change to solid  if PIN entries matched  solid if PIN entries not matched

datashur<sup>®</sup>  
PRO



### Quick Start Guide

**Step 1**  
Enter your PIN



**Step 2**  
Plug & Play



**Step 3**  
Unplug to  
automatically lock

Download a complete  
User Guide at  
[www.istorage-uk.com](http://www.istorage-uk.com)

iStorage<sup>®</sup>  
SECURING THE MAINSTREAM

85.5mm

54mm

datashur<sup>®</sup>  
PRO



### Quick Start Guide

**Step 1**  
Enter your PIN



**Step 2**  
Plug & Play



**Step 3**  
Unplug to  
automatically lock

Download a complete  
User Guide at  
[www.istorage-uk.com](http://www.istorage-uk.com)

iStorage<sup>®</sup>  
SECURING THE MAINSTREAM