











## Getting Started: How to unlock the drive

datashur<sup>®</sup>  
PRO

### EASY TO USE

YOUR datAshur PRO SHIPS WITH DEFAULT PIN CODE 1-1-2-2-3-3-4-4

|   |  |
|---|--|
| 1. *Press <b>KEY Button</b>    | All LEDs    will flash together once and then blink  |
| 2. *Within 10 seconds enter <b>User PIN</b> (factory default <b>PIN 1-1-2-2-3-3-4-4</b> ) and press <b>KEY Button</b>  |  solid for approximately 2 seconds and then change to solid    |
| 3. Connect the datAshur PRO into USB port within 30 seconds   |  remains solid<br> will flicker and turn to solid  |
| 4. datAshur PRO can now be accessed as any other USB storage device   | Your computer assigns a new drive letter (e.g. F: or G:)   |
| 5. To lock the datAshur PRO, save all data and unplug the drive   | All indicators will turn off<br>Drive is now locked  |

\*before connecting



iStorage datAshur PRO is developed and manufactured by iStorage Ltd. and is based on DataLock® technology licensed from ClevX, LLC



## Quick Start Guide



### Please note:

The datAshur PRO drive may need to be charged before use for 30-60 minutes by inserting into a powered USB port.

**FOR SECURITY, CHANGE  
FACTORY DEFAULT PIN**  
SEE OTHER SIDE FOR INSTRUCTIONS



  
SECURING THE MAINSTREAM  
[www.istorage-uk.com](http://www.istorage-uk.com)

85.5mm

54mm

Quick Start Guide shown at actual size

Printing instructions:  
This is a tri-fold brochure to be printed on both sides with a finished folded dimensions of 85.5mm x 54.00mm

WHEN FOLDED THE QSG WILL LOOK LIKE THIS WITH A FINISHED FOLDED DIMENSIONS OF 85.5 mm x 54 mm

## How to change User PIN:




















iStorage<sup>®</sup>  
SECURING THE MAINSTREAM



### CAUTION

### FOR SECURITY, CHANGE FACTORY DEFAULT PIN

PIN must not be sequential or all the same number e.g. 1-2-3-4-5-6-7 or 3-3-3-3-3-3-3

|  |  |
|--|--|
| 1. Press <b>KEY Button</b>   | All LEDs    will flash together and then blink  |
| 2. Enter <b>User PIN</b> (factory default <b>PIN 1-1-2-2-3-3-4-4</b> ) and press <b>KEY Button</b>    |  solid for approximately 2 seconds and then change to solid    |
| 3. Press <b>KEY Button twice</b>     |  will blink   |
| 4. Within 10 seconds enter <b>New User PIN</b> (must be 7 -15 digits) and press <b>KEY Button twice</b>          |  will blink   |
| 5. Re-enter <b>New User PIN</b> and press the <b>KEY Button twice</b>  <br>Insert the datAshur PRO into USB port |  will illuminate and then change to solid  if PIN entries matched<br> solid if PIN entries not matched                          |

datashur<sup>®</sup>  
PRO



### Quick Start Guide

**Step 1**  
Enter your PIN



**Step 2**  
Plug & Play



**Step 3**  
Unplug to  
automatically lock

Download a complete  
User Guide at  
[www.istorage-uk.com](http://www.istorage-uk.com)

iStorage<sup>®</sup>  
SECURING THE MAINSTREAM

85.5mm

54mm

datashur<sup>®</sup>  
PRO



### Quick Start Guide

**Step 1**  
Enter your PIN



**Step 2**  
Plug & Play



**Step 3**  
Unplug to  
automatically lock

Download a complete  
User Guide at  
[www.istorage-uk.com](http://www.istorage-uk.com)

iStorage<sup>®</sup>  
SECURING THE MAINSTREAM